

Installation Instructions

S-5!® Warning! Please use these products responsibly! Visit our website or contact your S-5! distributor for available load test results. The user and/or installer of these parts is responsible for all necessary engineering and design to ensure the CorruBracket™ 500T has been properly spaced and configured. **Notice to S-5! users:** Due to the many variables involved with specific panel products, climates, snowmelt phenomena, and job particulars, the manufacturer cannot and does not express any opinions as to the suitability of any S-5! assembly for any specific application and assumes no liability with respect thereto. S-5! products are tested for ultimate holding strength on various profile types and materials. This information is available from the S-5! website: www.S-5.com. This document is an installation guide only and the photographs and drawings herein are for the purpose of illustrating installation, tools and techniques, not system designs. Information contained within is intended to apply to the document as a whole.

CorruBracket 500T is mounted directly into the crest of the corrugation with the recommended sheet metal screws or bulb rivets.

Tools Needed


- Screw Gun* or Bulb Rivet Gun
- String Line
- Rag
- Tape Measure

***For time saving tool recommendations contact S-5!**

Use Proper Hardware

Only use appropriate screws and hardware when attaching this product to the roof sheeting.

Sheeting Only



Not Provided

Rivet Specifications: 9/32"
(7.7mm) Diameter - Alu/Alu Flat
Head Bulb-Tite Rivet with 5/8"
(16mm) EPDM Washer Grip
0.032" - 0.375"/0.8mm - 9.5mm



Provided


Screw Specifications: 1/4"
(6.3mm) Diameter - 1" (25mm)
Length - Stainless Steel Self Tap-
ping Screw with Hardened Steel
Piercing Point - 5/16" (8mm) Hex
Head - 5/8" (16mm) Stainless
Steel / EPDM Sealing Washer

To Install CorruBracket 500T

A) Attaching to roof sheeting

1. The only surface preparation necessary is to simply wipe away excess oil and debris. Refer to (Fig 1).
2. Secure the CorruBracket 500T directly into the crown of the roof profile with the recommended screws via the pre-punched holes, or by pre-drilling the proper-sized hole in the sheeting through the pre-punched holes and riveting with bulb-type rivets (as per rivet manufacturer's installation instructions). To achieve tested holding strength, secure the CorruBracket 500T by using all of the pre-punched hole locations. Drive fasteners until washers are adequately seated and sealed. Refer to (Fig 2).

Note: Do not over-drive fasteners; a slight extrusion of rubber around the washer is a good visual-tightness check. If a fastener has been stripped due to over-driving, it is important to remove the fastener and replace it with a bulb rivet or larger diameter fastener. To avoid stripping, use screw gun with depth-sensing nose piece or adjustable torque clutch.

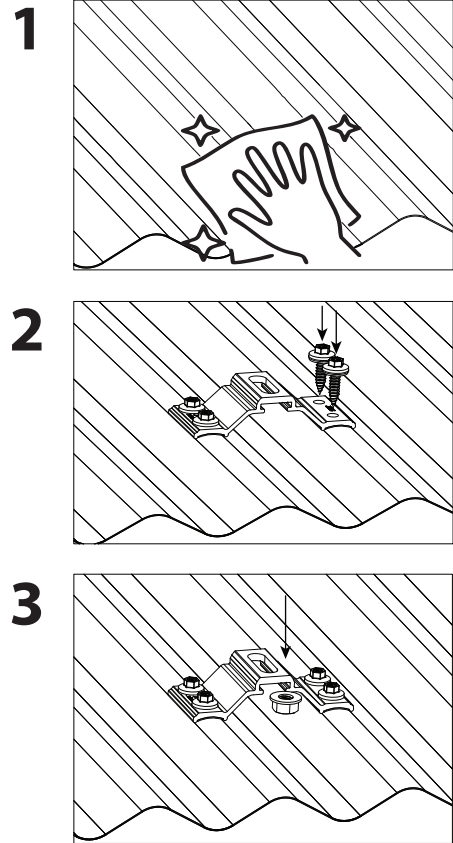

3. From either end of the CorruBracket 500T slide the included M8-1.25 hex flange nut (flange side up) into the top groove (**Fig 3**). The CorruBracket 500T is now ready to install the S-5-PVKIT 2.0 by insertion of the the PV Standoff, or other ancillaries by using a standard M8 bolt through the slotted top thru-hole and the previously inserted hex flange nut. For critical attachment applications utilizing an M8-1.25 X 16 mm Hex Flange Bolt, tighten the M8 bolt to 160 inch pounds (13 foot pounds).

CorruBracket 500T Placement Tips

a) Horizontal bracket alignment

To ensure brackets are installed in a straight line when desired, install a single CorruBracket 500T on each end of the roof at a measured, consistent distance from the bottom edge of the roof. Use a string line between the two brackets. Mount the remaining CorruBracket 500T along the string line, directly into the roof. Refer to (**Fig a**).

b) Upslope bracket spacing

For upslope bracket spacing techniques reference the S-5! website at www.S-5.com

